Your DxO

Home / Your DxO ONE / Checking the battery level and charging



Checking the battery level and charging

Your DxO ONE

The DxO ONE has a built-in 750 mAh lithium-ion battery. This allows it to operate independently and not drain the iPhone battery. When fully charged, you can take up to 190 photos or 60 minutes of video. The camera's available charge level is displayed on its OLED screen:





No battery


Français Español Deutsch

• 日本語

RELATED POSTS

LANGUAGES


Technical reference (Part 1) **Application parameters**

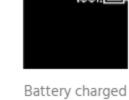

Battery charged


If you just purchased your camera or have not used it for a long time, we recommend fully charging your DxO ONE before using it. The battery level displayed may be overestimated for a few minutes; in that case, your camera's battery life might seem to be reduced, with abnormal drops in level. If nothing appears on the screen when you turn it on, refer to section "Technical reference (Part 1)". To improve the battery life of your DxO ONE, see our tips in section <u>"Technical reference (Part 1)"</u>.

You can charge the battery using your iPhone charger. Open the DxO ONE rear door.

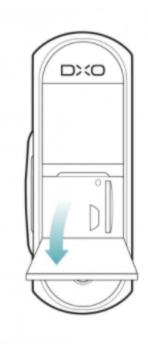

plug. We recommend using your iPhone charger.

2 Insert the USB cord into the micro USB port, and plug the other end into the USB socket on a wall charger

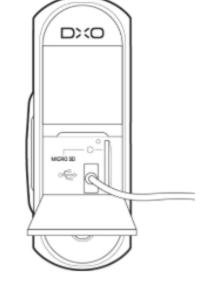


Make sure the OLED screen shows the device is charging.







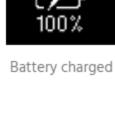

Open the DxO ONE rear door.


Insert the USB cable supplied with your DxO ONE into the micro USB port, and plug the other end into the

Charging via a computer is slower than using a wall plug, and can more easily be interrupted (e.g. if the

computer goes to sleep). Whenever possible, it's best to charge your camera using a wall plug.

computer.




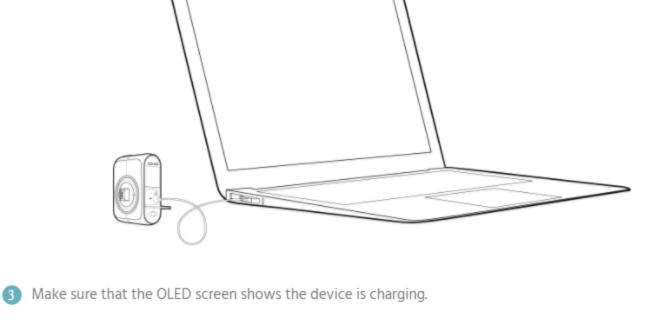

battery life. For more details, see section "Application parameters".





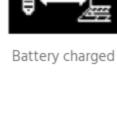

Optimizing battery life under normal conditions

Recharge the battery as soon as possible

If you just purchased your camera or have not used it for a long time, recharge the battery as soon as possible.

Note that the firmware version, temperature, and certain settings can also increase or reduce the DxO ONE's

To ensure your DxO ONE is always charged and ready to take photos, here are a few tips to follow regularly.

In both cases, the camera may show the battery level as higher than its actual level when you first switch it on. You can take a few photos, but the battery will drain abnormally quickly. We strongly recommend you fully recharge your DxO ONE's battery as soon as possible so you can use it at full power.

When the DxO ONE has not been used for a long time and the battery is completely discharged, it might not turn


on, even when the charger is connected. In this case, see section "Technical reference (Part 1)".



faster and more efficient.


of the capture screen.

iPhone screen or by pressing the shutter button half way.

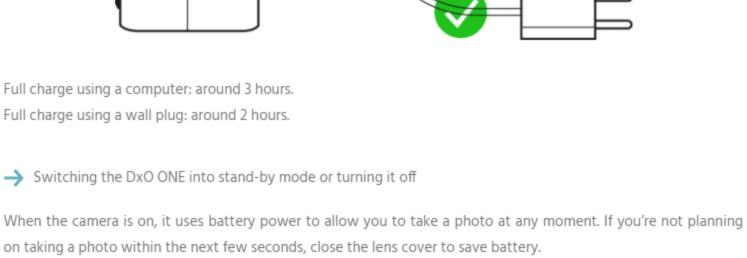

If you have to be ready to take a shot at any moment, use the instant stand-by button instead, located on the right

This will switch the camera into power-saving mode, but you can activate it again in an instant by touching your

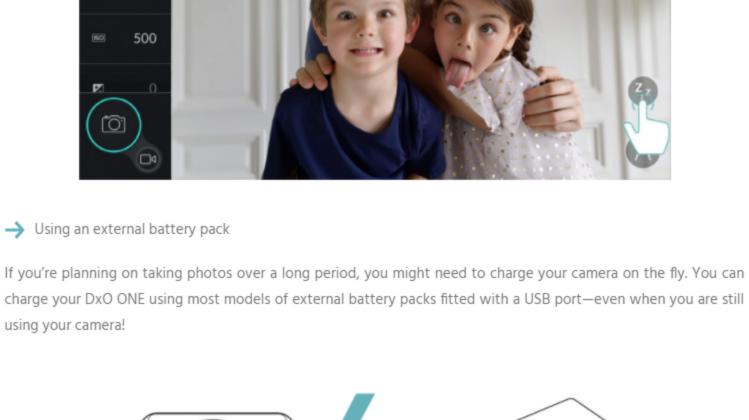

CLOSING THE LIGHTNING CONNECTOR

Receive our newsletter

TURNING THE DXO ONE ON AND OFF >

